


名称	订单说明书
首次使用型号	VB0171Z0381J
材料	封面封底105g铜版纸彩色印刷+内容70g双胶纸黑白印刷
页面规格/颜色	A5大小
技术要求	1. 印刷颜色应均匀，且无毛边，无脏点、划伤、折痕，在使用环境下不褪色，不变色，不起翘。 2. 图案和文字清晰完整，无错印、漏印、重影。 3.装订牢固，裁切整齐。 4. 首样经技术人员确认方可批量生产。 5. 制品应符合Q/HKB J 16001《零、部件及原材料中有害化学物质含量规定》要求。 6.未注尺寸公差按企标 Q/HKB J01002 附录D中的 中等m 执行。
备注	
升版原因	

	设计	张耘暄	审核	张莉	日期	2025-11-07
	批准	白莉	版本号	A	图号/物料号	N6020009036/20155035



ХОЛОДИЛЬНИК

REFRIGERATOR

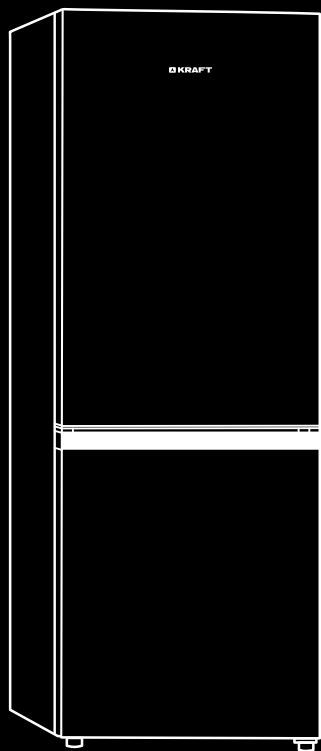

KF-DC190W
KF-DC190S

ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ • USER GUIDE

Уважаемый покупатель!

Поздравляем Вас с приобретением холодильника KRAFT.

Уверены, что он станет вашим надежным помощником в заморозке и сохранении продуктов. Перед началом эксплуатации холодильника внимательно изучите данную инструкцию. Если Вы столкнетесь с проблемами в процессе использования данного холодильника, пожалуйста свяжитесь с нами.

Спасибо за покупку!

Не подвергайте устройство резким перепадам температур. Резкая смена температуры (например, внесение устройства с мороза в теплое помещение) может вызвать конденсацию влаги внутри устройства и нарушить его работоспособность при включении. После хранения холодильника при низких температурах или после транспортирования в зимних условиях включать его можно не раньше, чем через 6 часов пребывания при комнатной температуре в распакованном виде.

СОДЕРЖАНИЕ

ТРЕБОВАНИЯ БЕЗОПАСНОСТИ	4
ОПИСАНИЕ ПРИБОРА	7
УСТАНОВКА И ПОДКЛЮЧЕНИЕ	8
ПАНЕЛЬ УПРАВЛЕНИЯ	9
ПОЛЕЗНЫЕ СОВЕТЫ	10
РАЗМОРОЗКА	12
ОЧИСТКА И УХОД	12
ПЕРЕНАВЕШИВАНИЕ ДВЕРЕЙ	13
СНЯТИЕ И УСТАНОВКА ДВЕРНЫХ ПОЛОК	17
ТАБЛИЦА НЕИСПРАВНОСТЕЙ	17
УТИЛИЗАЦИЯ	18
СПЕЦИФИКАЦИЯ / КОМПЛЕКТАЦИЯ	19
ГАРАНТИЙНЫЙ ТАЛОН	20



Внимательно изучите данную инструкцию!

ТРЕБОВАНИЯ БЕЗОПАСНОСТИ

В целях Вашей безопасности и корректного использования холодильника внимательно прочитайте данную инструкцию перед эксплуатацией, а также сохраните ее для повторного прочтения после транспортировки или продажи прибора. Неправильное обращение с прибором может привести к его поломке, нанести материальный ущерб или причинить вред здоровью пользователя.

Холодильник предназначен исключительно для охлаждения и замораживания пищевых продуктов в бытовых условиях или условиях, приближенных к бытовым, таких как:

- кухня для персонала в магазинах, офисах и иных рабочих местах;
- техника для клиентов отелей, moteley и иных апарт-отелей;
- кафетерии и иные учреждения, не относящиеся к розничной торговле и сети магазинов.

Использование холодильника не по назначению, нарушение правил установки, эксплуатации, очистки и мер безопасности, а также несоблюдение температурных условий лишает вас права на гарантийное обслуживание.

⚠ ВНИМАНИЕ! Производитель не несет ответственности за какие-либо повреждения, возникшие вследствие неправильного использования прибора или несоблюдения мер предосторожности и безопасности.

- Извлекая прибор из упаковки, убедитесь в его целостности и отсутствии повреждений. Уберите упаковочные материалы подальше от детей. Утилизируйте упаковку правильно.
- Данный прибор не предназначен для использования лицами с ограниченными физическими или умственными возможностями (в том числе детьми до 8 лет), а также лицами, не имеющими достаточных знаний и опыта по его использованию, если не находятся под наблюдением человека, ответственного за их безопасность. Дети не должны играть с элементами прибора. Обслуживание и чистка прибора не может осуществляться детьми без присмотра взрослых людей.
- Использование холодильника детьми возможно только под наблюдением взрослых. Следите, чтобы дети не забрались в холодильник и не заперли себя изнутри, захлопнув дверцу.
- Перед первым (и каждым последующим) включением проверьте прибор на отсутствие повреждений и соответствуют ли технические характеристики, указанные на изделии, параметрам электросети.
- При наличии каких-либо повреждений прибора или шнура электропитания ни в коем случае не подключайте его к электросети. Сообщите о повреждениях в магазин, в котором был приобретен товар, обратитесь в сервисный центр для экспертизы и ремонта. Не пытайтесь ремонтировать его самостоятельно. В данном случае не выбрасывайте упаковку.
- Разбирать, ремонтировать холодильник или вносить какие-либо изменения в его конструкцию небезопасно. Любое повреждение электропроводки прибора может вызвать удар током, пожар или замыкание. В случае возникновения не-

исправностей следует сразу обратиться в авторизованный сервисный центр, указав тип проблемы и модель вашего холодильника. Для ремонта могут быть использованы только оригинальные запасные детали. Неквалифицированный ремонт снимает прибор с гарантийного обслуживания.

- Если вы планируете уехать куда-либо на длительный период времени, отключите холодильник от электросети, выньте продукты и хорошо вымойте его изнутри. Оставьте дверь открытой для предотвращения появления неприятного запаха.



ОПАСНОСТЬ ПОРАЖЕНИЯ ЭЛЕКТРИЧЕСКИМ ТОКОМ

- Холодильник должен быть подключен к электросети 220-240 В / 50 Гц через розетку с заземлением и силой тока не менее 10 А. Неправильно выполненное заземление или отклонение параметров напряжения более чем на 10% могут повлечь нестабильную работу прибора или поражение электрическим током.
- Вставляйте вилку шнура электропитания в розетку только после установки прибора. Убедитесь, что к вилке электропитания имеется свободный доступ. При этом не следует касаться вилки кабеля электропитания влажными руками. Вытрите насухо вилку, очистите ее от пыли и аккуратно вставьте в розетку. Пыль, вода или слабый контакт могут стать причиной пожара или поражения электрическим током.
- При перемещении, обслуживании или ремонте холодильник должен быть отключен от электросети. Для отключения держитесь за вилку, не тяните и не дергайте за шнур электропитания.
- Не пользуйтесь прибором с поврежденным шнуром электропитания или розеткой. Не следует перекручивать, перегибать или наращивать шнур электропитания. Не ставьте на него тяжелые предметы. Убедитесь, что шнур не касается острых кромок и нагреваемых поверхностей.
- Не используйте холодильник на улице, не подвергайте его воздействию дождя, влаги, прямых солнечных лучей и других атмосферных явлений. Не устанавливайте прибор в помещениях с повышенной влажностью воздуха при температуре окружающей среды ниже 0°C, на влажной поверхности, а также в местах задымления и пылеобразования.
- Не погружайте прибор в воду, предотвращайте попадание воды и каких-либо жидкостей на любую часть прибора. Ни в коем случае не дотрагивайтесь к нему мокрыми руками.



ПОЖАРООПАСНОСТЬ

- Следует использовать отдельную розетку для подключения холодильника. Использование одной розетки для нескольких приборов может привести к возгоранию.
- Убедитесь, что вилка шнура электропитания не повреждена и не деформирована. Неисправная вилка может перегреваться и стать причиной возникновения пожара. Не используйте адаптеры, удлинители и «тройники» для подключения прибора. Если Вы почувствовали запах гари проводки, отключите электропитание на распределительном щитке, выньте вилку из розетки и обратитесь в

сервисный центр.

- Остерегайтесь прикосновения руками и предметами к нагревающимся частям холодильника (компрессор, конденсатор) во избежание возможных ожогов и возгораний.
- Устанавливать холодильник следует вдали от источников тепла и нагревательных приборов, остерегайтесь источников воспламенения.
- Хорошо проветривайте помещение, где установлен холодильник, т.к. недостаток циркуляции воздуха вокруг прибора может привести к его перегреванию.



ВЗРЫВООПАСНОСТЬ

- Не используйте рядом с холодильником и не храните в нем горючие материалы, такие как эфир, бензин, спирт, сжиженный нефтяной газ (пропан-бутан), распылители, лекарственные препараты или косметику. Это может привести к взрыву, пожару, порче хранящихся продуктов или химической реакции.
- Хладагент (R600a, изобутан), содержащийся в системе холодильника, натуральный газ под высоким давлением, наиболее совместимый с окружающей средой и безопасный, тем не менее, горючий.



ПРЕДУПРЕЖДЕНИЕ! *Хладагент и газ необходимо утилизировать соответствующим образом, так как они могут вызвать травмы глаз или воспламениться. Перед утилизацией проверьте, чтобы трубки контура охлаждения не были повреждены.*



ПРЕДУПРЕЖДЕНИЕ! *Пожароопасно/легковоспламеняющиеся вещества. Если контур охлаждения поврежден:*

- *Избегайте открытого огня и других источников возгорания.*
- *Хорошо проветрите помещение, где установлен прибор.*



ОПАСНОСТЬ ПОВРЕЖДЕНИЯ

- Устанавливать холодильник следует на ровную твердую сухую поверхность, чтобы предотвратить его падение и избежать ранений или гибели людей.
- Во время транспортировки и установки прибора убедитесь, что система охлаждения не повреждена.
- При перемещении холодильника должны соблюдаться меры безопасности. Не передвигайте его за дверцу, петли не рассчитаны на вес холодильника и могут сломаться. Не следует ставить тяжелые предметы на холодильник.
- Не помещайте внутрь холодильника детей, домашних животных и электрические приборы. Следите, чтобы они не повредили холодильник или шнур электропитания.
- Не кладите бутылки с газированными напитками в холодильник, т.к. при заморозке жидкости давление в емкости увеличивается, что может привести к взрыву и повреждению холодильника.

- После отключения холодильника от сети, повторно включать его следует не раньше, чем через 5 минут, чтобы избежать повреждения компрессора.
- Не прикасайтесь к продуктам из морозильника влажными или мокрыми руками, это может привести к обморожениям и повреждениям кожи.
- Лед может причинить повреждения и обморожение кожи, если употреблять его прямо из морозильника.
- Не используйте механические приспособления для откалывания льда от внутренних стенок морозильной камеры или другие способы ускорения процесса размораживания.
- Не допускайте попадания жиров и масел (в том числе растительных) на корпус и пластиковые детали прибора во избежание их порчи. Не нагревайте пластиковые детали.
- Следите за чистотой холодильника и уплотнителя дверцы. Не используйте острые металлические скребки, едкие и абразивные чистящие средства, так как они могут поцарапать поверхности прибора.


⚠ ВНИМАНИЕ! Во избежание перегрузки сети, не используйте другие приборы высокой мощности в той же цепи.

ОПИСАНИЕ ПРИБОРА

1. Регулятор температуры
2. Полки в холодильной камере
3. Крышка отсека для фруктов/овощей
4. Отсек для фруктов/овощей
5. Выдвижной отсек морозильной камеры
6. Ящик морозильной камеры
7. Ящик морозильной камеры
8. Регулируемые ножки
9. Верхняя дверная полка
10. Нижняя дверная полка


Для получения дополнительного пространства в морозильной камере вы можете удалить из нее ящики (за исключением нижнего).

*Изготовитель оставляет за собой право вносить изменения в конструкцию, технические характеристики, внешний вид, комплектацию товара, не ухудшающие его потребительских качеств, без предварительного уведомления потребителя.

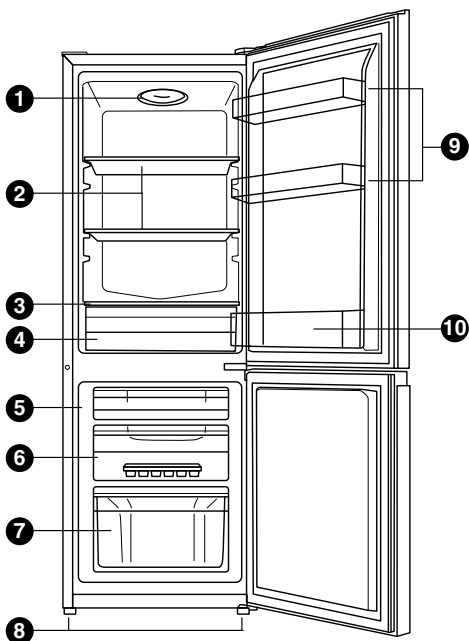

УСТАНОВКА И ПОДКЛЮЧЕНИЕ

- Холодильник не является встраиваемым. Сверху, с задней и боковых его сторон должно быть свободное пространство (не менее 10 см) для циркуляции воздуха и снижения энергопотребления.
- Не устанавливайте холодильник вблизи источников тепла и в зоне действия прямых солнечных лучей или повышенной влажности.
- Убедитесь, что напряжение электрического тока указанное в инструкции соответствуют параметрам сети Вашего дома.

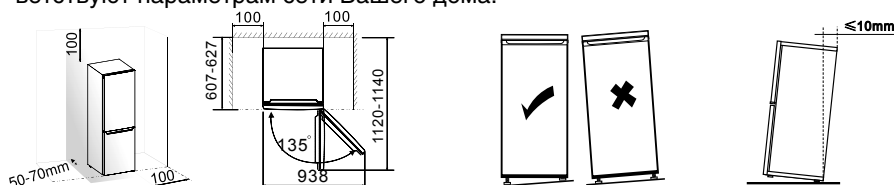

- При установке холодильника боковой стороной к стене помещения предусмотрите наличие достаточного пространства для открывания дверей на угол более 90 градусов, чтобы обеспечить возможность извлечения полок и ящиков.
- Чтобы исключить вибрацию, проверьте установку холодильника по уровню. При необходимости отрегулируйте ножки, чтобы компенсировать неровность пола. Для того чтобы дверца лучше закрывалась, холодильник должен быть слегка наклонен назад. Для того, чтобы повернуть регулируемые ножки, немного наклоните холодильник. Чтобы приподнять переднюю часть холодильника, немного наклонив его, поверните регулируемые ножки против часовой стрелки, а чтобы опустить — по часовой стрелке.
- Перед использованием тщательно вымойте холодильник.
- Установите съемные детали, такие как форма для льда и др., на соответствующие места.
- Вставьте вилку сетевого шнура в розетку. Не включайте в эту розетку другие электроприборы.

⚠ ВНИМАНИЕ! Розетка электросети должна быть в свободном доступе, холодильник должен легко подключаться к энергоснабжению.

Размещение

Установите прибор в помещении, где температура окружающей среды соответствует маркировке о климатическом классе холодильника.


Климатический класс		Температура окружающей среды
SN	Субнормальный	от +10°C до +32°C
N	Нормальный	от +16°C до +32°C
ST	Субтропический	от +16°C до +38°C
T	Тропический	от +16°C до +43°C

При первой установке холодильника дайте ему поработать 2–4 часа, чтобы внутри установилась рабочая температура, и только затем заполняйте его свежими или замороженными продуктами. После отключения холодильника от сети, повторно включать его следует не ранее, чем через 5 минут.

ПАНЕЛЬ УПРАВЛЕНИЯ

Ручка выбора температуры (термостат) расположена на верхней части холодильного отделения.

1. Поверните ручку термостата в положение «3» и включите холодильник.
2. Подождите 24 часа перед тем, как поместить продукты в холодильник. По истечению данного времени температура внутри холодильника будет оптимальной для хранения продуктов.

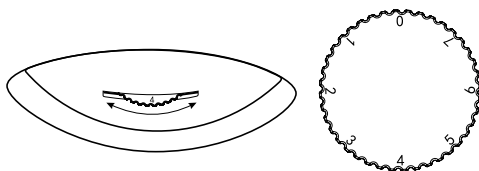

Регулировка температуры

- Температура в холодильнике и морозильной камере контролируется термостатом, установленным на внутренней стенке холодильной камеры.
- Значения на термостате — это температурные режимы, а не точные градусы температуры. Положение термостата «0» — холодильник выключен, а «7» — установлена самая низкая температура.
- Рекомендуемые положения регулятора «2–4». Для контроля температуры внутри холодильника рекомендуется использовать подходящий термометр. Если вы хотите сделать температуру выше или ниже, просто поверните ручку термостата на более теплую или более холодную настройку соответственно. Температуру рекомендуется измерять в течении 2-х часов.
- Температура холодильника в режиме «3–4» установится между + 2°C и + 5°C в холодильной камере и от -10°C до -18°C в морозильной.
- Для снижения температуры холодильника, поворачивайте ручку термостата в сторону «6». Установка более низкой температуры ведет к более эффективному охлаждению и замораживанию продуктов, однако влечет за собой больший расход электроэнергии.

При высокой температуре окружающей среды и установке термостата в положения «6» или «7», компрессор будет работать непрерывно для поддержания низкой температуры в холодильнике.

⚠ ПРИМЕЧАНИЕ! Холодильник не может работать правильно, если он находится в зоне высоких или низких температур.

Рекомендации по заморозке

- Морозильная камера может сохранять пищу свежей в течение длительного времени. В основном она используется для хранения замороженных продуктов и приготовления льда.

- Морозильная камера предназначена для хранения мяса, рыбы и других продуктов питания, не потребляемых в короткий срок.
- Мясо желательно разделять на мелкие кусочки для быстрого замораживания и легкого доступа. Обращаем внимание, что продукты питания следует употреблять в течение срока годности.

ОСОБЕННОСТИ РАБОТЫ ХОЛОДИЛЬНИКА

Не перемещайте и не наклоняйте холодильник во время его работы. В компрессоре может возникнуть шум. Данная особенность не влияет на работоспособность компрессора.

⚠ ВНИМАНИЕ! *В результате температурных деформаций составных частей холодильника может слышаться потрескивание. Характерные звуки включения терморегулятора и компрессора являются нормальными звуками, возникающими при работе электрооборудования прибора.*

⚠ ПРИМЕЧАНИЕ. *Хладагент, циркулирующий внутри системы охлаждения, может негромко булькать, даже если компрессор не работает. Не беспокойтесь, это совершенно нормально.*

В процессе работы холодильника могут быть слышны: шелест крыльчаток вентиляторов; щелчки срабатывания датчика-реле температуры; жужжание при вводе воздушных заслонок; журчание хладагента, циркулирующего по трубкам холодильной системы; легкие потрескивания при температурных деформациях материалов. Данные звуки не связаны с каким-либо дефектом и носят функциональный характер.

ПОЛЕЗНЫЕ СОВЕТЫ

- Не рекомендуется хранить в холодильнике продукты, которые быстро портятся при низкой температуре, такие как бананы и дыни.
- Перед тем, как поставить в холодильник, горячие продукты и напитки следует охладить до комнатной температуры.
- Горячие продукты и напитки могут привести к порче других продуктов.
- При хранении продуктов пользуйтесь ёмкостями с крышками. Это предотвратит испарение влаги и поможет сохранить вкус и питательные вещества продуктов.
- Не заслоняйте вентиляционные отверстия продуктами. Непрерывная циркуляция холодного воздуха позволяет поддерживать постоянную температуру в холодильнике.
- Не следует часто открывать дверцы. При открывании дверей теплый воздух попадает внутрь, что приводит к повышению температуры.
- Во избежание проблем с закрыванием дверцы холодильника не рекомендуется хранить в дверной корзине слишком много продуктов.
- Не замораживайте ранее оттаявшие продукты. Это приведет к потере вкусовых качеств и полезных веществ.
- Не следует хранить в холодильнике фармацевтическую продукцию или другие продукты, требующие строгого соблюдения температурного режима.

- Если необходимо быстро заморозить свежие продукты, поставьте их в нижний выдвижной ящик морозильного отделения.
- Замороженные продукты следует хранить в упаковке (в полиэтиленовой пленке, алюминиевой фольге и т.п.) в морозильном отделении.
- Не храните бутылки в морозильном отделении — при замерзании они могут лопнуть.

№	Тип отделения	Температура хранения, °C	Продукты
1	Холодильное отделение	+2 ~ +8	Продукты, не предназначенные для заморозки: яйца, готовые блюда, фасованные товары, фрукты и овощи, молочная продукция, кондитерские изделия, напитки и прочее.
2	Морозильное отделение с маркировкой «4 звездочки» (***)*	≤ -18	Продукты, которые можно замораживать свежими: рыба, креветки, моллюски и мясные продукты. Срок хранения — до 3 месяцев (возможна потеря вкуса и питательных свойств)
3	Морозильное отделение с маркировкой «3 звездочки» ***	≤ -18	Продукты, которые можно хранить замороженными: рыба, креветки, моллюски и мясные продукты. Срок хранения — до 3 месяцев (возможна потеря вкуса и питательных свойств). Не подходит для замораживания свежих продуктов.
4	Морозильное отделение с маркировкой «2 звездочки» **	≤ -12	Продукты, которые можно хранить замороженными: рыба, креветки, моллюски и мясные продукты. Срок хранения — до 2 месяцев (возможна потеря вкуса и питательных свойств). Не подходит для замораживания свежих продуктов.
5	Морозильное отделение с маркировкой «1 звездочка» *	≤ -6	Продукты, которые можно хранить замороженными: рыба, креветки, моллюски и мясные продукты. Срок хранения — до 1 месяца (возможна потеря вкуса и питательных свойств). Не подходит для замораживания свежих продуктов.
6	Низкотемпературное отделение (0 звездочек)	-6 ~ 0	Свежая курица, свинина, говядина, рыба и фабрично упакованные продукты — срок хранения до 3 дней (рекомендуется употребить в первый день).
7	Отделение для скоропортящихся пищевых продуктов	-2 ~ +3	Мясо и рыба: в морозилке (ниже 0°C) — до 7 дней. В холодильнике - максимум 2 дня (лучше в день покупки) Морепродукты: только в замороженном виде — до 15 дней. В холодильнике не хранить!
8	Отделение для хранения свежих пищевых продуктов	0 ~ +4	Свежие мясные продукты (свинина, говядина, курица), рыба и готовые блюда. Рекомендуется употреблять в течение суток с момента приготовления/покупки, максимальный срок хранения — не более 3 дней.

- Если вы не будете пользоваться прибором длительное время, выключите его, разморозьте, очистите, просушите и оставьте дверцу открытой, чтобы предотвратить появление плесени внутри устройства.

РАЗМОРОЗКА

Через некоторое время в некоторых местах, на стенках и ящиках морозильника будет нарастать иней. В качестве временной меры этот иней следует очистить пластиковым скребком.

⚠ ВНИМАНИЕ! Никогда не используйте металлический или острый инструмент!

Полную разморозку рекомендуется проводить один раз в год, или если слой инея превышает 5 мм. Выберите время, когда запас замороженных продуктов будет небольшим, и действуйте следующим образом:

1. Выньте замороженные продукты. Отключите холодильник от электросети и оставьте дверцы открытыми. Рекомендуется переложить замороженные продукты в другой морозильник или холодильник. Если это невозможно, оберните продукты сначала, в несколько листов газеты или полотенца, а затем в толстое одеяло и положите в прохладном месте.
2. Счистите как можно больше инея, используя пластиковый скребок. Для того, чтобы ускорить процесс оттаивания, поместите чаши с горячей воды в морозильное отделение. По мере таяния льда, удаляйте его пластиковым скребком.
3. После завершения разморозки почистите и протрите холодильник.

ОЧИСТКА И УХОД

В гигиенических целях прибор (внутренние и наружные поверхности) необходимо очищать каждые 2 месяца.

- Перед уборкой убедитесь, что электропитание отключено.
- Снаружи и внутри холодильник следует мыть чистой салфеткой, смоченной в тёплой воде с жидким моющим средством. Затем насухо вытрите сухой салфеткой.
- После уборки проверьте, что сетевой шнур не повреждён. Затем плотно вставьте вилку в розетку.

⚠ ВНИМАНИЕ! Запрещается пользоваться абразивными веществами, бензином, бензолом, растворителем, хлоргидратом, горячей водой, грубой щеткой и т.д., которые могут повредить поверхность холодильника.

Очистка уплотнителей на дверце

Следите за чистотой уплотнителей на дверце. Прилипшие продукты или напитки могут вызвать прилипание уплотнителя к корпусу и уплотнитель может порваться при открывании дверцы. Вымойте его мягким моющим средством, сполосните и тщательно высушите.

⚠ ВНИМАНИЕ! Прибор можно подключать в сеть только после полного высушивания уплотнителей.

ЗАМЕНА ЛАМП ОСВЕЩЕНИЯ

⚠ ПРЕДУПРЕЖДЕНИЕ! Замена ламп освещения не должна производиться пользователем!

В случае повреждения лампы освещения, позвоните на горячую линию для получения дополнительной информации. Данное предупреждение касается только холодильников, в которых установлены лампы освещения.


Для замены лампы потребуются выполнение следующих действий:

1. Отключить прибор от сети.
2. Удалить крышку лампы путем смещения крышки вверх.
3. Удерживать крышку лампы одной рукой и сместить ее другой рукой, нажимая при этом на электрический соединитель.
4. Заменить лампу и установите ее на место.

ПЕРЕНАВЕШИВАНИЕ ДВЕРЕЙ


Холодильник спроектирован так, что дверцы могут открываться вправо или влево, в зависимости от планировки Вашей кухни. В случае необходимости перенавесить двери, следует вызвать мастера по обслуживанию. Гарантийные обязательства не распространяются на перенавешивание дверей.

1. Поставьте холодильник вертикально. Откройте верхнюю дверцу, чтобы вынуть все дверные полки (для избежания повреждения). Закройте дверь.
2. Снимите верхнюю крышку шарнира (справа) (1), затем выверните винты (2) и снимите часть (3), сложите часть, только что отсоединенную назад в пластиковый пакет, поместите винты (2) и часть (3) сбоку для использования.

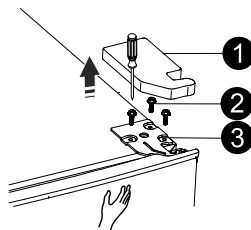


⚠ ПРИМЕЧАНИЕ: Пожалуйста, держите верхнюю дверцу рукой, чтобы предотвратить падение двери.


3. Снимите верхнюю дверцу и поместите ее на гладкую поверхность вверх. Ослабьте винты (1) и снимите часть (2), затем установите часть (2) с левой стороны с помощью винтов (1).

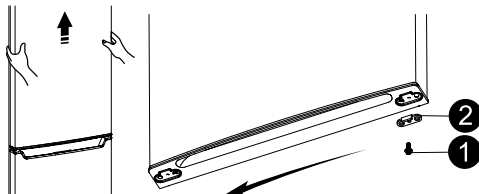


4. Открутите винты (1), фиксирующие средний шарнир (2), и снимите шарнир (2). Снимите нижнюю дверь.

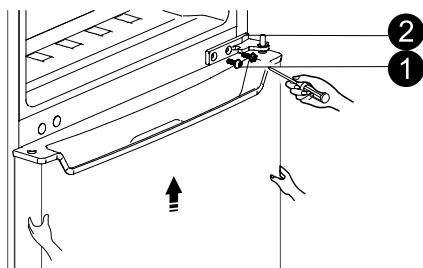


5. Положите дверь на мягкую поверхность лицевой панелью вверх. Ослабьте винты (1) и снимите деталь (2). Затем установите деталь (2) с левой стороны и прикрутите винтами (1).

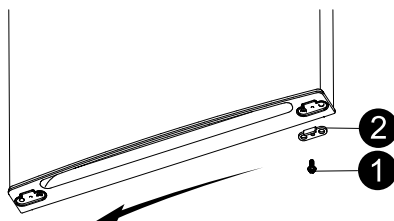


6. Переставьте заглушки отверстий среднего шарнира с левой стороны на правую, как показано на рисунке.

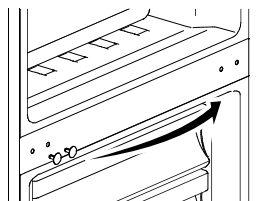


7. Положите холодильник горизонтально. Снимите деталь (3) и ослабьте винты (4). Снимите детали (5), (2) и (1).

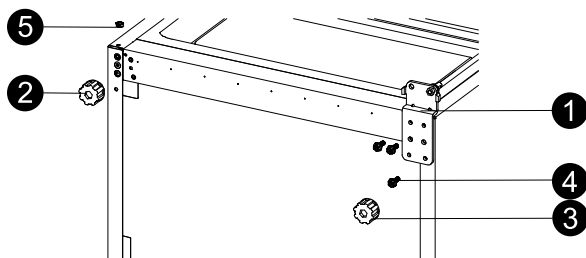


8. Открутите нижний шарнир, переставьте ось в соседнее отверстие и установите шарнир на противоположную сторону.

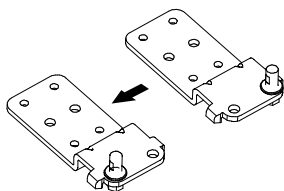


9. Повторите шаг 7 в обратном порядке: переставьте деталь (1) на левую сторону, детали (2) и (5) на правую сторону и прикрутите деталь (1) винтами (4). Установите деталь (3).

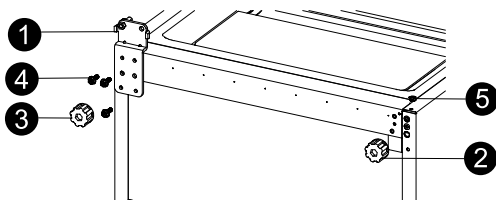


10. Установите нижнюю дверь на ось нижнего шарнира. Поверните средний шарнир на 180° и вставьте его осью в отверстие в верхней части нижней двери. Прикрутите средний шарнир.

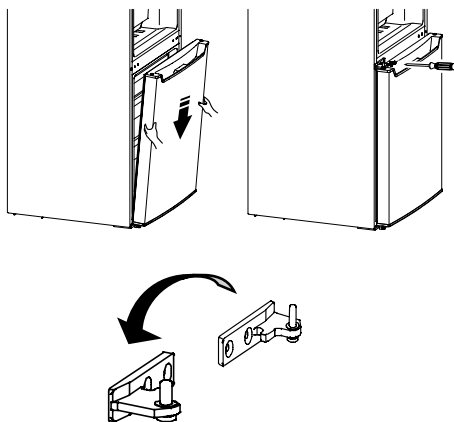


11. Открутите ось верхнего шарнира, переверните шарнир и установите ось на место. Отложите в сторону, так как деталь понадобится позже.

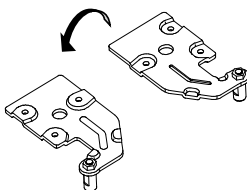

12. Снимите заглушку отверстий (1) и установите с правой стороны (2), как показано на рисунке.

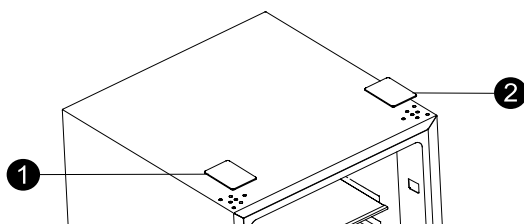

13. Установите верхнюю дверь. Установите деталь (1) и прикрутите винтами (2) (при установке придерживайте верхнюю дверь рукой). Установите деталь (3) (в пакете) с левой стороны.

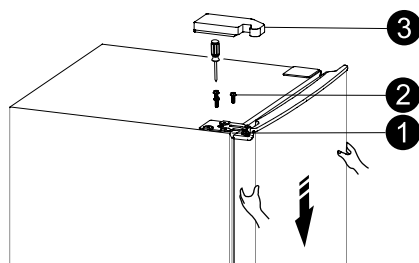

⚠ ПРИМЕЧАНИЕ. При установке детали (3) сначала сдвиньте ее слева направо до упора, а затем плотно прижмите сверху.


14. Откройте верхнюю дверь, установите дверные полки и закройте дверь.

Снятие и установка дверных полок

⚠ ВНИМАНИЕ! Не снимайте и не устанавливайте дверные полки самостоятельно! Если дверная полка повреждена, обратитесь за помощью в службу технической поддержки.

Чтобы заменить дверную полку, выполните следующие действия:

Нажмите на правую сторону дверной полки и поднимите ее вверх, удерживая левую сторону. Когда выемка полки будет отсоединена от двери холодильника, снимите полку, поднимая ее наклонно вверх.

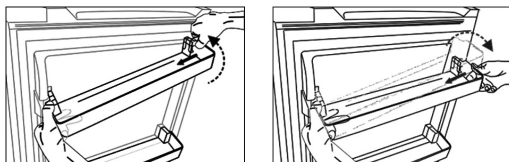

Для установки дверной полки, выполните следующие действия:

Сначала наклоните левую сторону дверной полки и убедитесь, что выемка на полке прикреплена к двери. Затем прижмите к дверце правую сторону полки, и надавите на нее в нужном месте.

ТАБЛИЦА НЕИСПРАВНОСТЕЙ

Прежде чем звонить в ремонтную службу, прочитайте этот раздел. Данный список включает в себя наиболее распространенные случаи, которые не являются результатом плохого качества сборки или некачественных материалов, использованных в данном приборе.

⚠ ВНИМАНИЕ! Перед устранением неполадок отключите электропитание. Только квалифицированный электрик обязан сделать поиск и устранение неисправностей, которых нет в этом руководстве.

⚠ ВНИМАНИЕ! При нормальном использовании могут появляться характерные звуки (компрессор, циркуляции хладагента).

Проблема	Возможная причина
Холодильник не работает	Холодильник не подключен к сети. Низкое напряжение. Отключение электросети или сработал предохранитель.
Неприятный запах в холодильнике	Продукты плохо упакованы. Испорченные продукты. Частое открывание двери холодильника.
Слабое охлаждение	Высокая внешняя температура. Одновременно загружено слишком много продуктов. Загружены «неостывшие» продукты. Частое открывание двери холодильника.

Проблема	Возможная причина
Лампа не горит	Если холодильник включен в сеть и работает, лампа нуждается в замене.
Наросты льда на уплотнительной ленте	Разогрейте уплотнительную ленту теплым воздухом, используя фен для сушки волос. Одновременно распрямите ленту руками, придавая ей необходимую для обеспечения герметичности форму.
Громкие звуки	Отрегулируйте ножки и выровняйте холодильник. Холодильник установлен слишком близко к стене или другим объектам. Неправильно установлены аксессуары..

В процессе эксплуатации при обнаружении неисправностей, которые потребитель не может устранить своими силами, необходимо обратиться в сервисную мастерскую по ремонту холодильной техники.

УТИЛИЗАЦИЯ



Утилизация холодильного прибора производится в соответствии с нормами и правилами, принятыми местной администрацией.

Правильная утилизация холодильного прибора, после окончания срока службы (эксплуатации), поможет предотвратить потенциально вредное воздействие на окружающую среду и здоровье человека.

Этот холодильный прибор содержит компоненты из горючего материала и не может быть утилизирован с обычным бытовым мусором (отходами).

Основные этапы утилизации:

- отсоедините от сети вилку и перережьте сетевой шнур;
- корпус, глухие двери, боковые части оборудования подлежат захоронению на полигонах бытовых и промышленных отходов;
- сжигание теплоизоляции корпуса, боковых частей категорически запрещается, ввиду образования при горении токсических веществ;
- компрессор, пускозащитное реле, проводка, теплообменники, алюминиевый профиль дверей, вентиляторы могут утилизироваться как лом черных и цветных металлов на предприятиях по переработке металла;
- элементы стеклянной структуры утилизируются на специализированном предприятии по утилизации стекла;
- лампы освещения утилизируются на специализированном предприятии по утилизации люминесцентных ламп.

СПЕЦИФИКАЦИЯ / КОМПЛЕКТАЦИЯ

Модель	KF-DC190W, KF-DC190S
Общий объём брутто (л)	180
Общий полезный объём (л)	170
Полезный объём холодильной / морозильной камер (л)	120 / 50
Система разморозки	ручная
Система вентиляции и охлаждения	Defrost
Тип управления	механическое
Класс энергоэффективности	A+
Потребление энергии (кВт*ч/год)	204
Потребляемая мощность (Вт)	100
Напряжение (В) / Частота тока (Гц)	220-240 / 50
Климатический класс	N~ST
Тип / количество компрессоров	обычный / 1
Хладагент	R600a
Термоизоляция	циклопентан
Уровень шума (дБ(А))	39
Суперзаморозка	нет
Сигнал открытой двери	нет
Количество охлаждающих камер	1
Количество дверей	2
Перенавешиваемая дверь	да
Ручка	встроенная
Цвет корпуса холодильника	белый, серебристый
Характеристики холодильной камеры	
Система разморозки	ручная
Количество регулируемых полок	2
Тип / количество крышек контейнеров для овощей	стекло / 1
Материал / количество контейнеров для овощей	пластик / 1
Материал / количество полок на двери	пластик / 3
Внутренняя подсветка	да
Температура охлаждения в холодильнике (°C)	от 0 до +4
Характеристики морозильной камеры	
Система разморозки	ручная
Мощность замораживания (кг/сутки)	2,5
Температура охлаждения в морозильной камере (°C)	до -18
Количество ящиков морозильной камеры	3
Габариты и вес	
Вес нетто / брутто (кг)	38 / 41
Габариты без упаковки, ШхГхВ (мм)	495х562х1430
Габариты в упаковке, ШхГхВ (мм)	521х585х1500
Комплектация	
Холодильник (шт.)	1
Инструкция по эксплуатации с гарантийным талоном (шт.)	1
Упаковка (шт.)	1

ГАРАНТИЙНЫЙ ТАЛОН

Дата продажи

« ____ » _____ 20 ____ г.

Штамп магазина

При продаже продавец обязан заполнить гарантийные талоны. Дата изготовления и серийный номер находятся на упаковке и на задней стенке товара.

Гарантийные обязательства изготовителя действительны только для холодильника марки KRAFT. **Срок гарантии составляет 1 год с даты приобретения. Срок службы изделия — 5 лет.**

Информация об авторизованных сервисных центрах доступна на сайте <http://kraftltd.com> или по бесплатному телефону службы поддержки +7 (800) 200-79-97. В случае возникновения вопросов или проблем, связанных с продукцией KRAFT, просим Вас обращаться в письменном виде по адресу: АО «ЛЕБЕДИНСКИЙ ТОРГОВЫЙ ДОМ», ул. Днепропетровская, 50 В, г. Ростов-на-Дону, 344093, Россия, либо по электронной почте: service@lbtd.ru.

1. Изготовитель гарантирует бесплатное устранение заводских дефектов или технических неисправностей в течение гарантийного срока эксплуатации в случае соблюдения Покупателем правил и условий гарантийного обслуживания. Все претензии по внешнему виду предъявляйте продавцу при покупке товара. После покупки товара ответственность за все внешние повреждения возлагается на потребителя.
2. Гарантия распространяется только на изделия, используемые в некоммерческих личных, семейных или домашних целях. В противном случае гарантийный срок составляет 3 месяца с момента приобретения.
3. Продавец оставляет за собой право проведения технической экспертизы качества изделия в установленные законодательством сроки.
4. Гарантийный ремонт не производится в следующих случаях:
 - недействительность гарантийного талона;
 - наличие повреждений и неисправностей, возникших в результате неправильного использования техники с нарушением правил эксплуатации, установки или транспортировки техники пользователем или торгующей организацией;
 - наличие повреждений и неисправностей, возникших в результате действия третьих лиц или непреодолимой силы, попадания внутрь посторонних предметов и насекомых, повреждений животными;
 - установление факта отклонения от Государственных технических стандартов, питающих электрических и кабельных сетей, подачи большей мощности, чем предусмотрено изготовителем;
 - установление факта ремонта (попытки ремонта) техники самостоятельно или посторонними лицами;
 - использование изделия в промышленных или коммерческих целях.
5. Гарантийный талон является недействительным в следующих случаях:
 - неправильное или неполное заполнение талона магазином и мастером;
 - отсутствие даты продажи и штампа магазина.
6. Изготовитель не несет ответственности за ущерб, причиненный людям, животным и помещениям по причине нарушения правил техники безопасности, транспортировки и эксплуатации прибора.
7. Гарантийное обслуживание не распространяется на установку, чистку и уход за прибором.

КОРЕШОК талона №1 на гарантийный ремонт холодильника KRAFT модель _____ серийный № _____ Изъят « _____ » _____ 20 _____ г. Исполнитель _____ Ф.И.О. _____ подпись _____ Вид и содержание выполненных работ _____ Наименование сервисной службы _____ Линия отреза _____	ТАЛОН №1 НА ГАРАНТИЙНЫЙ РЕМОНТ холодильника KRAFT модель _____ серийный № _____ Продан _____ (наименование и адрес торгового предприятия) _____ _____ тел: _____ Дата продажи « _____ » _____ г. Штамп магазина _____ (личная подпись продавца) Наименование и адрес сервисной службы* _____ (* заполняется торговым предприятием) _____ _____
КОРЕШОК талона №2 на гарантийный ремонт холодильника KRAFT модель _____ серийный № _____ Изъят « _____ » _____ 20 _____ г. Исполнитель _____ Ф.И.О. _____ подпись _____ Вид и содержание выполненных работ _____ Наименование сервисной службы _____ Линия отреза _____	ТАЛОН №2 НА ГАРАНТИЙНЫЙ РЕМОНТ холодильника KRAFT модель _____ серийный _____ Продан _____ (наименование и адрес торгового предприятия) _____ _____ тел: _____ Дата продажи « _____ » _____ г. Штамп магазина _____ (личная подпись продавца) Наименование и адрес сервисной службы* _____ (* заполняется торговым предприятием) _____ _____

Холодильник KRAFT модель _____ серийный № _____ Владелец, его адрес _____ _____ Телефон владельца _____ Причина отказа (неисправность) _____ Владелец: _____ _____ _____ подпись _____ Механик: _____ _____ Ф.И.О. _____ Выполнены работы: _____ _____ Дата « _____ » _____ г. Механик: _____ Владелец: _____ _____ подпись _____ Утверждаю _____ _____ наименование сервисного предприятия и адрес _____ _____ _____ должность руководителя предприятия, _____ МП _____ подпись _____ выполнившего обслуживание _____	
Холодильник KRAFT модель _____ серийный № _____ Владелец, его адрес _____ _____ Телефон владельца _____ Причина отказа (неисправность) _____ Владелец: _____ _____ _____ подпись _____ Механик: _____ _____ Ф.И.О. _____ Выполнены работы: _____ _____ Дата « _____ » _____ г. Механик: _____ Владелец: _____ _____ подпись _____ Утверждаю _____ _____ наименование сервисного предприятия и адрес _____ _____ _____ должность руководителя предприятия, _____ МП _____ подпись _____ выполнившего обслуживание _____	

КОРЕШОК талона №3 на гарантийный ремонт холодильника KRAFT модель _____ серийный № _____ Изъят « _____ » _____ 20 _____ г. Исполнитель _____ Ф.И.О. _____ подпись _____ Вид и содержание выполненных работ _____ Наименование сервисной службы _____ Линия отреза _____	ТАЛОН №3 НА ГАРАНТИЙНЫЙ РЕМОНТ холодильника KRAFT модель _____ серийный № _____ Продан _____ (наименование и адрес торгового предприятия) _____ _____ тел: _____ Дата продажи « _____ » _____ г. Штамп магазина _____ (личная подпись продавца) Наименование и адрес сервисной службы* _____ (* заполняется торговым предприятием) _____ _____
КОРЕШОК талона №4 на гарантийный ремонт холодильника KRAFT модель _____ серийный № _____ Изъят « _____ » _____ 20 _____ г. Исполнитель _____ Ф.И.О. _____ подпись _____ Вид и содержание выполненных работ _____ Наименование сервисной службы _____ Линия отреза _____	ТАЛОН №4 НА ГАРАНТИЙНЫЙ РЕМОНТ холодильника KRAFT модель _____ серийный № _____ Продан _____ (наименование и адрес торгового предприятия) _____ _____ тел: _____ Дата продажи « _____ » _____ г. Штамп магазина _____ (личная подпись продавца) Наименование и адрес сервисной службы* _____ (* заполняется торговым предприятием) _____ _____

Холодильник KRAFT модель _____ серийный № _____ Владелец, его адрес _____ _____ Телефон владельца _____ Причина отказа (неисправность) _____ Владелец: _____ _____ _____ подпись _____ Механик: _____ _____ Ф.И.О. _____ Выполнены работы: _____ _____ Дата « _____ » _____ г. Механик: _____ Владелец: _____ _____ подпись _____ Утверждаю _____ _____ наименование сервисного предприятия и адрес _____ _____ _____ должность руководителя предприятия, _____ МП _____ выполнившего обслуживание _____	
Холодильник KRAFT модель _____ серийный № _____ Владелец, его адрес _____ _____ Телефон владельца _____ Причина отказа (неисправность) _____ Владелец: _____ _____ _____ подпись _____ Механик: _____ _____ Ф.И.О. _____ Выполнены работы: _____ _____ Дата « _____ » _____ г. Механик: _____ Владелец: _____ _____ подпись _____ Утверждаю _____ _____ наименование сервисного предприятия и адрес _____ _____ _____ должность руководителя предприятия, _____ МП _____ выполнившего обслуживание _____	

DEAR CUSTOMER!

Congratulations on your purchase of the KRAFT refrigerator.

We are sure that it will become your reliable assistant in freezing and preserving food. If you encounter any problems while using this refrigerator, please contact us.

Thank you for your purchase!

Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 6 hours before switching it on.

CONTENTS

SAFETY INFORMATION	26
OVERVIEW	28
INSTALLATION.....	29
CONTROL PANEL	31
DAILY USE	31
CLEANING	34
VACATION TIME	34
HOW TO SAVE ENERGY.....	34
SERVICING	35
REPLACEMENT OF LIGHTING LAMPS	35
REVERSING THE DOOR SWING.....	36
REMOVING AND INSTALLING DOOR SHELVES	39
TROUBLE SHOOTING.....	40
THIS APPLIANCE MUST BE EARTHED.....	41
ENVIRONMENT PROTECTION.....	41
SPECIFICATION / EQUIPMENT	42
WARRANTY CARD	45



WARNING! Before installing and first using the appliance read this manual carefully!

SAFETY INFORMATION

For your safety and proper use of the refrigerator, please read these instructions carefully before using them, and save them for rereading after transporting or selling the appliance. Improper handling of the device may cause damage to the device, cause material damage, or cause damage to the user's health.

The refrigerator is designed exclusively for cooling and freezing food products in domestic conditions or conditions close to domestic ones, such as:

- kitchen for staff in shops, offices and other workplaces;
- equipment for clients of hotels, motels and other apartments;
- cafeterias and other establishments that are not related to retail trade and chain stores.

The use of the refrigerator for other purposes, violation of the rules of installation, operation, cleaning and safety measures, as well as noncompliance with temperature conditions, deprives you of the right to warranty service.

⚠ ATTENTION! The manufacturer is not responsible for any damage caused by improper use of the device or noncompliance with safety and safety measures.

- When removing the device from its packaging, make sure that it is intact and not damaged. Keep the packaging materials away from children. Dispose of the packaging properly.
- This appliance is not intended for use by persons with reduced physical or mental capabilities (including children under 8 years of age), or by persons who do not have sufficient knowledge and experience in its use, unless they are under the supervision of a person responsible for their safety. Children should not play with the elements of the device. The appliance must not be serviced or cleaned by children without adult supervision.
- Before the first (and each subsequent) switch-on, check the device for damage and whether the technical specifications indicated on the product correspond to the power supply parameters.
- If the appliance or the power cord is damaged in any way, do not connect it to the mains. Report the damage to the store where the product was purchased, contact the service center for examination and repair. Do not attempt to repair it yourself. In this case, do not throw away the packaging.
- It is not safe to disassemble, repair, or make any changes to the refrigerator. Any damage to the electrical wiring of the appliance can cause an electric shock, fire, or short circuit. In the event of a malfunction, you should immediately contact an authorized service center, specifying the type of problem and the model of your refrigerator. Only original spare parts can be used for repairs. Unqualified repair removes the device from warranty service.
- If you plan to go somewhere for an extended period of time, disconnect the refrigerator from the power supply, remove the food and wash it well from the inside. Leave the door open to prevent the appearance of an unpleasant smell.

⚡ RISK OF ELECTRIC SHOCK

- The refrigerator must be connected to the 220-240 V / 50 Hz power supply via a grounded outlet with a current of at least 10 A. Incorrect grounding or a deviation

of the voltage parameters by more than 10% can cause unstable operation of the device or electric shock.

- Do not plug the power cord into the wall outlet until the appliance has been installed. Make sure that the power plug is easily accessible. Do not touch the power cable plug with wet hands. Wipe the plug dry, clean it from dust and carefully insert it into the outlet. Dust, water, or weak contact can cause fire or electric shock.
- The refrigerator must be disconnected from the power supply when moving, servicing, or repairing. To disconnect, hold on to the power plug, and do not pull or pull the power cord.
- Do not use the appliance with a damaged power cord or outlet. Do not twist, bend, or extend the power cord. Do not place heavy objects on it. Make sure that the cord does not touch sharp edges or hot surfaces.
- Do not use the refrigerator outdoors, do not expose it to rain, moisture, direct sunlight, or other atmospheric phenomena. Do not place the appliance on a wet surface.
- Do not immerse the appliance in water, and do not allow water or any liquids to enter any part of the appliance. Never touch it with wet hands.



FIRE HAZARD

- Do not immerse the appliance in water, and do not allow water or any liquids to enter any part of the appliance. Never touch it with wet hands.
- Use a separate outlet to connect the refrigerator. Using the same outlet for multiple appliances may cause a fire.
- Make sure that the power cord plug is not damaged or deformed. A faulty plug can overheat and cause a fire. Do not use adapters, extension cords, or «T-pieces» to connect the appliance.
- Avoid touching the heated parts of the refrigerator (compressor, condenser) with your hands and objects to avoid possible burns and fires.
- Install the refrigerator away from heat sources and heating devices, beware of sources of ignition.
- Ventilate the room where the refrigerator is installed well, as a lack of air circulation around the appliance may cause it to overheat.



DANGER OF EXPLOSION

- Do not use or store flammable materials such as ether, gasoline, alcohol, liquefied petroleum gas (propane-butane), sprayers, medicines, or cosmetics in the refrigerator. This can lead to an explosion, fire, damage to stored products, or a chemical reaction.
- The refrigerant (R600a, cyclopentane) contained in the freezer system, a natural gas under high pressure, the most compatible with the environment and safe, yet combustible.



RISK OF DAMAGE

- Install the refrigerator on a flat, hard, dry surface to prevent it from falling and to avoid injury or death.
- During transport and installation of the refrigerator, make sure that the refrigerator cooling system is not damaged.

- Safety precautions must be observed when moving the refrigerator. Do not move it behind the door, the hinges are not designed for the weight of the refrigerator and may break. Do not place heavy objects on the refrigerator. Do not use it as a countertop for anything.
- Do not place children, pets, or electrical appliances inside the refrigerator. Make sure that they do not damage the refrigerator or the power cord.
- Do not put bottles of carbonated drinks in the refrigerator, as when the liquid is frozen, the pressure in the container increases, which can lead to an explosion and damage to the refrigerator.
- After disconnecting the refrigerator from the mains, turn it on again no earlier than 5 minutes to avoid damage to the compressor.
- Do not touch food from the refrigerator with wet or wet hands, as this may cause frostbite and skin damage. Ice can cause skin damage and frostbite if consumed directly from the refrigerator.
- Do not use mechanical devices to break the ice from the inner walls of the refrigerator or other ways to speed up the defrosting process.
- Do not allow fats and oils (including vegetable oils) to get on the body and plastic parts of the device to avoid their damage. Do not heat the plastic parts.
- Keep the refrigerator and the door seal clean. Do not use sharp metal scrapers, caustic and abrasive cleaning products, as they can scratch the surfaces of the refrigerator.


! ATTENTION! To avoid overloading the network, do not use other high-power appliances in the same circuit.

OVERVIEW

1. Thermostat.
2. Refrigerator shelf
3. Crisper Cover
4. Crisper
5. Sliding freezer compartment
6. Freezer drawer
7. Freezer drawer
8. Adjustable legs
9. Upper door shelf
10. Lower door shelf

To get extra space in the freezer, you can remove the drawers from it (except for the bottom one).

* The manufacturer reserves the right to change designs, specifications, appearance, configuration of the product without impairing its consumer qualities, without prior notice to the customer.

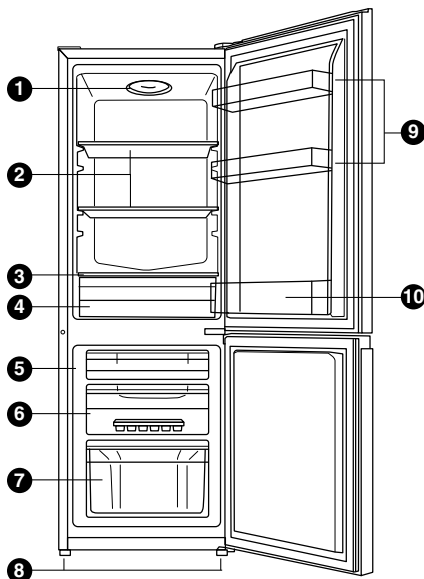

INSTALLATION

Location

When selecting a position for your unit you should make sure the floor is flat and firm, and the room is well ventilated. Avoid locating your unit near a heat source, e.g. cooker, boiler or radiator. Also avoid direct sunlight as it may increase the electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly. This unit is not designed for use in a garage or outdoor installation. Do not drape the unit with any covering.

When installing the unit, ensure that 10 cm of free space is left at both sides, 10 cm at the rear and 30 cm at the top of the unit. This will allow cold air to circulate around the refrigerator and improve the efficiency of the cooling process.


Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

CLIMATE CLASS		Ambient temperature
SN	Sub Normal	+10°C to +32°C
N	Normal	+16°C to +32°C
ST	Sub Tropical	+16°C to +38°C
T	Tropical	+16°C to +43°C

Door Space Requirements

The unit's door must be able to open fully as shown.

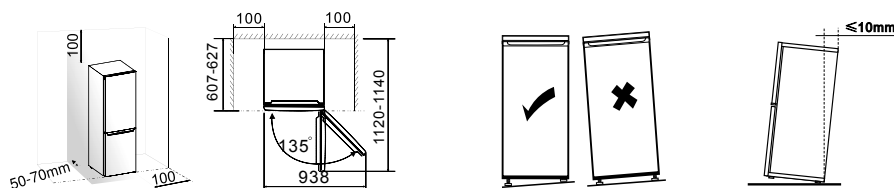

Levelling the Unit

To do this adjust the two levelling feet at the front of the unit.

If the unit is not level, the door and magnetic seal alignments will not be covered properly. Make sure that the foot touches the ground before use. Look down from the top, clockwise and counterclockwise loosening, tightening.

Cleaning Before Use

Wipe the inside of the Fridge/Freezer with a weak solution of bicarbonate of soda. Then rinse with warm water using a damp sponge or cloth. Wash the baskets and shelves in warm soapy water and dry completely before replacing in the Fridge/Freezer. The external parts of the Fridge/Freezer can be cleaned with wax polish.

Electrical Connection

- Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized service center.

- This refrigerator should be properly grounded for your safety. The power cord of this refrigerator is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.
- Do not, under any circumstances, cut or remove the third ground prong from the power cord supplied.
- This refrigerator requires a standard 220-240 V A.C. ~/50 Hz electrical outlet with three-prong ground.
- This refrigerator is not designed to be used with an inverter.
- The cord should be secured behind the refrigerator and not left exposed or dangling to prevent accidental injury.
- Never unplug the refrigerator by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.
- Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance. Use of an extension cord can negatively affect the performance of the unit.

⚠ ATTENTION! Before Plugging in! You must check that you have a socket which is compatible with the plug supplied with the unit.

⚠ ATTENTION! Before switching on! Do not turn on until two hours after moving the unit.

⚠ ATTENTION! Do not switch on until four hours after moving the Fridge/Freezer. The coolant fluid needs time to settle. If the appliance is switched off at any time, wait 30 minutes before switching back on to allow the coolant fluid to settle.

Interior Accessories


Various glass or plastic storage shelves are included with your appliance — different models have different combinations.

You should always slide one of the full size glass storage shelves into the lowest set of guides, above the fruit and vegetable containers, and keep it in this position. To do this, pull the storage shelf forward until it can be swiveled upwards or downwards and removed.

⚠ NOTE: Please do the same in reverse to insert the shelf at a different height.

In order to make the most of the volume of the fresh food storage compartment and frozen-food storage compartment, the user can remove one or more shelves, drawers, out of the appliance, according to your daily use.

CONTROL PANEL

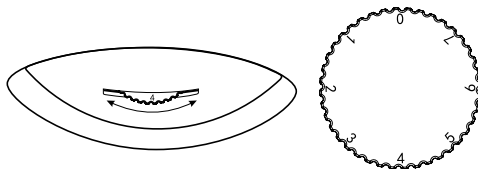

Adjusting the temperature

1. The temperature in the refrigerator and freezer compartment is controlled by the temperature controller installed on the inside wall of the refrigerator compartment. We strongly recommend you use a freezer thermostat to check that the temperature is below -18 centigrade before loading any food. This can take 2-3 hours.
2. The marks on the knob are the temperature grades, NOT the exact degrees of temperature. «0» is «OFF» and «7» represents the lowest temperature.
3. Please start with the knob set to position «4». Use a suitable thermometer to check the temperature after two hours. The refrigerator temperature should be set between +2°C and +5°C and the freezer will vary between -10 and -18 degrees centigrade over a typical cycle. To reduce the refrigerator temperature turn the knob towards «6» and check after one hour.

! NOTE: The Fridge/Freezer may not operate at the correct temperature if it is in a particularly hot or cold room or is you open the Fridge/Freezer door too often.

4. The refrigerator temperature in mode «3-4» will be set between + 2°C and + 5°C in the refrigerator compartment and from -10°C to -18°C in the freezer.
5. To reduce the refrigerator temperature, turn the thermostat knob to the «6» side. Setting a lower temperature results in more efficient cooling and freezing of food, but entails higher energy consumption. If the ambient temperature is high and the thermostat is set to position «6» or «7», the compressor will operate continuously to maintain a low temperature in the refrigerator.

! NOTE: the maximum allowable capacity is 3 kg at a time.

DAILY USE

Take extra care with meat and fish

Cooked meats should always be stored on a shelf above raw meats to avoid bacterial transfer. Keep raw meats on a plate which is large enough to collect juices and cover it with cling film or foil.

Leave space around food

This allows cold air to circulate around the Fridge, ensuring all parts of the Fridge are kept cool.

Wrap up food!

To prevent transfer of flavors and drying out, food should be separately packed or covered. Fruit and vegetables need not be wrapped.

Pre-cooked food should be cooled properly

Allow pre-cooked food to cool down before placing in the Fridge. This will help to stop the internal temperature of the Fridge from rising.

Shut the door!

To prevent cold air escaping, try to limit the number of times you open the door. When returning from shopping, sort foods to be kept in your Fridge before opening the door. Only open the door to put food in or take it out.

TIPS FOR SHOPPING FOR FROZEN FOODS

Choose packs carefully. Make sure the frozen food package is in perfect condition.

Purchase frozen food last. Always buy frozen products last on your shopping trip or visit to the supermarket.

Keep frozen foods together. Try to keep frozen food together whilst shopping, and on the journey home as this will help to keep the food cooler.

Store food straight away. Don't buy frozen food unless you can freeze it straight away. Special insulated bags can be bought from most supermarkets and hardware shops. These keep frozen food cold for longer.

Thawing frozen food

For some foods, thawing before cooking is unnecessary. Vegetables and pasta can be added directly to boiling water or steam cooked. Frozen sauces and soups can be put into a saucepan and heated gently until thawed.

FREEZING FRESH FOODS, USEFUL TIPS

Use quality food and handle it as little as possible. Freeze food in small quantities, it freezes faster, takes less time to thaw and enables you to eat it in the quantity you need.

Freezing fresh foods

First, estimate the amount of food you will be freezing. If you are freezing large amounts of fresh food, remember to turn the control dial to 7. This will lower the temperature in the Freezer, freezing your food quicker and helping to keep the goodness in. However you should do this sparingly to conserve energy.

DEFROSTING

After a period of time frost will build up in certain areas in the Fridge/Freezer compartment. After a period of time frost will build up in certain areas in the Fridge/Freezer compartment. As a temporary measure, this frost should be scraped away using a plastic scraper.

 **ATTENTION! Never use a metal or sharp instrument!**

Complete defrosting will however become necessary approximately once per year, or if the frost layer exceeds 5 mm to maintain the efficiency of the Fridge/Freezer. This should

be carried out if the frost build-up cannot be scraped away, or if it begins to interfere with the food storage. Choose a time when the stock of frozen food is low and proceed as follows:

- Take out the frozen food, turn the Fridge/Freezer off at the mains supply and leave the doors open. Ideally the frozen food should be put into another Fridge/Freezer or refrigerator. If this is not possible wrap the food, firstly in several sheets of newspaper or large towels and then in a thick rug or blanket and keep it in a cool place.
- Scrape away as much frost build-up as possible using the plastic scraper. To accelerate the thawing process place bowls of hot water inside the Fridge/Freezer cabinet. As the solid frost loosens, prize it away with the plastic scraper and remove.
- When defrosting is completed, clean your Fridge/Freezer.

Nº	Compartment type	Storage temp, °C	Products
1	Refrigeration compartment	+2 ~ +8	Products not intended for freezing: eggs, ready meals, packaged goods, fruits and vegetables, dairy products, confectionery, beverages, etc.
2	Freezer compartment marked with «4 stars» (***)*	≤ -18	Products that can be frozen fresh: fish, shrimp, shellfish and meat products. Shelf life – up to 3 months (possible loss of taste and nutritional properties).
3	Freezer compartment marked «3 stars» (***)	≤ -18	Products that can be frozen: fish, shrimp, shellfish and meat products. Shelf life – up to 3 months (possible loss of taste and nutritional properties). Not suitable for freezing fresh products.
4	Freezer compartment marked with «2 stars» (**)	≤ -12	Products that can be frozen: fish, shrimp, shellfish and meat products. Shelf life is up to 2 months (loss of taste and nutritional properties is possible). Not suitable for freezing fresh products.
5	Freezer compartment marked with «1 star» (*)	≤ -6	Products that can be stored frozen: fish, shrimp, shellfish and meat products. Shelf life – up to 1 month (possible loss of taste and nutritional properties). Not suitable for freezing fresh products.
6	Low Temperature compartment (0 stars)	-6 ~ 0	Fresh chicken, pork, beef, fish and factory-packaged products – shelf life up to 3 days (recommended to consume on the first day).
7	Compartment for perishable food products	-2 ~ +3	Meat and freshwater products: in the freezer (below 0°C) – up to 7 days. In the refrigerator – maximum 2 days (preferably on the day of purchase). Seafood: only frozen – up to 15 days. Do not store in the refrigerator!
8	Compartment for storing fresh food	0 ~ +4	Fresh meat products (pork, beef, chicken), fish and ready meals. It is recommended to consume within 24 hours from the moment of preparation/purchase, the maximum shelf life is no more than 3 days.
9	Wine Compartment	+5 ~ +20	Wines and other beverages.

NOTE: Store food in the appropriate compartments or according to the storage temperature and period indicated on the product.

CLEANING

Cleaning inside the Fridge/Freezer

You should clean the Fridge/Freezer internally with a weak solution of bicarbonate of soda. Then rinse with warm water using a damp sponge or cloth and wipe dry.

Wash the baskets in warm soapy water and ensure they are completely dry before replacing in the Fridge/Freezer.

Cleaning the Door Seals

Keep the door seals clean. Food or liquid residue may cause the seal to stick to the appliance body, which could tear when opening the door. Clean the seal with a mild detergent, rinse thoroughly, and dry completely.

 **WARNING!** *The appliance may only be plugged in after the seals are completely dry.*

Cleaning outside the Fridge/Freezer

- Use standard non-abrasive detergent diluted in warm water to clean the Fridge/Freezer exterior.
- The grille of the condenser at the back of the Fridge/Freezer and the adjacent components can be vacuumed using a soft brush attachment.
- Do not use harsh cleaners, scouring pads or solvents to clean any part of the Fridge/Freezer.

VACATION TIME

- Turn off the refrigerator first and then unplug the unit from the wall outlet.
- Remove all the food.
- Clean the refrigerator.
- Leave the lid open slightly to avoid possible formation of condensation, mold, or odors.
- Use extreme caution in the case of children. The unit should not be accessible to child's play.
- Short vacations: Leave the refrigerator operating during vacations of less than three weeks.
- Long vacations: If the appliance will not be used for several months, remove all food and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary or have the door removed.

HOW TO SAVE ENERGY

1. Install the refrigerator in the coolest part of the room, out of direct sunlight and away from heating ducts or registers. Do not place the refrigerator next to heat-producing appliances such as a range, oven or dishwasher.
2. The refrigerator door should remain open only as long as necessary; do not place hot food inside the refrigerator.
3. Organize the refrigerator to reduce door openings. Remove as many items as needed at one time and close the door as soon as possible.

4. The refrigerator door should be properly closed to avoid increased energy consumption, and the formation of excess ice and / or condensation inside.
5. Constantly circulating cold air keeps the temperature homogenous inside the refrigerator. For this reason, it is important to properly distribute the food, to facilitate the flow of air.
6. Cover foods and wipe containers dry before placing them in the refrigerator. This cuts down on moisture build-up inside the unit.
7. Do not overcrowd the refrigerator or block cold airvents. Doing so causes the refrigerator to run longer and use more energy. Shelves should not be lined with aluminum foil, wax paper or paper toweling. Liners interfere with cold air circulation, making the refrigerator less efficient, which could cause food spoilage.
8. During prolonged absences (example: vacations), it is advisable to disconnect the refrigerator, remove all the food, and clean it . The door should be left slightly open to avoid mold and unpleasant odors. This will not affect the refrigerator when it is reconnected.
9. During short absences (example: holidays), the refrigerator can remain on. However, remember that prolonged power outages may occur while you are gone.

SERVICING

- This product should be serviced by an authorized engineer and only genuine spare parts should be used.
- Under no circumstances should you attempt to repair the appliance yourself.
- Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact the local store where your purchase was made.
- When the appliance is not in use for long periods, disconnect from the electricity supply, empty all foods and clean the appliance, leaving the door ajar to prevent unpleasant smells.

REPLACEMENT OF LIGHTING LAMPS

 **WARNING!** *The replacement of the lighting lamps must not be carried out by the user!*

In case of damage to the lighting lamp, call the hotline for additional information. This warning applies only to refrigerators with lighting fixtures.


To replace the lamp, you will need to do the following:

1. Disconnect the appliance from the mains.
2. Remove the lamp cover by sliding the cover up.
3. Hold the lamp cover with one hand and slide it with the other hand, while pressing the electrical connector.
4. Replace the lamp and replace it.


REVERSING THE DOOR SWING

Typically, the following steps are recommended for door reversal. Different refrigerator models may have different illustrations.

1. Place the refrigerator upright. open the top door to remove all door shelves (to avoid damage). close the door.
2. Remove the top hinge cover (right side) 1, then unscrew the bolts 2) and detach part place the detached part back into a plastic bag, and set aside bolts 2 and part 3 for later use.

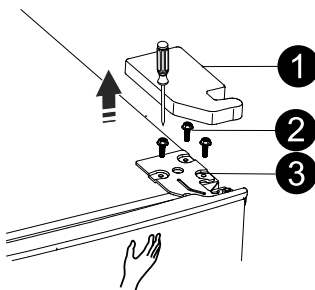


⚠ Note: please hold the top door with your hand to prevent it from falling.

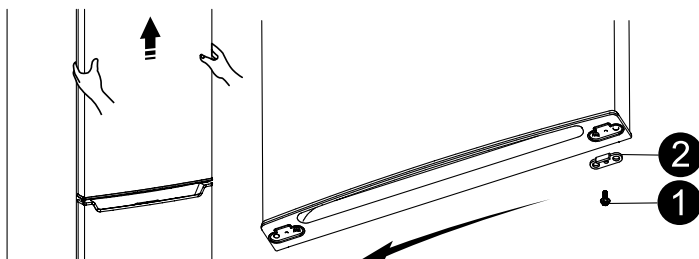

3. Remove the upper door and place it on a smooth surface with its panel upwards. Loosen screws (1) and remove part (2). Then, install part (2) to the left side using the screws (1).


4. Loosen screws (1) used to fix the middle hinge (2) and remove the middle hinge (2). Then, remove the bottom door.

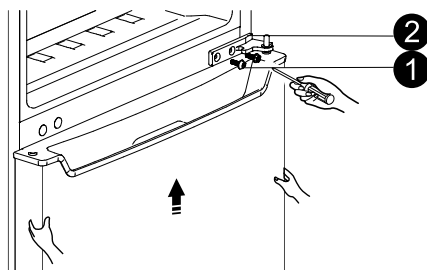


5. Place the bottom door on a smooth surface with its panel upwards. Loosen screws (1) and remove part (2). Then, install part (2) on the left side, using the screws (1).




6. Move the screw hole covers on middle cover plate from left to right (as shown in figure below).

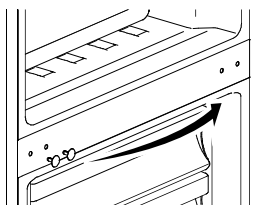


7. Place the refrigerator horizontally. Remove part (3), then loosen the screws (4). Remove parts (5), (2), and (1).

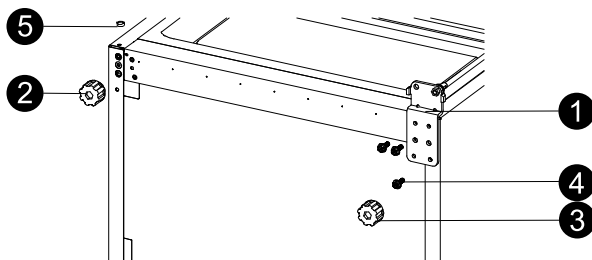


8. Undo the bottom hinge, move the plug to the adjacent hole, and replace the hinge on the opposite side.

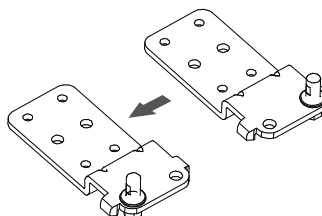


9. Repeat step 7 in the opposite direction: move part (1) to the left; move parts (2) and (5) to the right; and fix part (1) with screws (4). Finally, reinstall part (3).

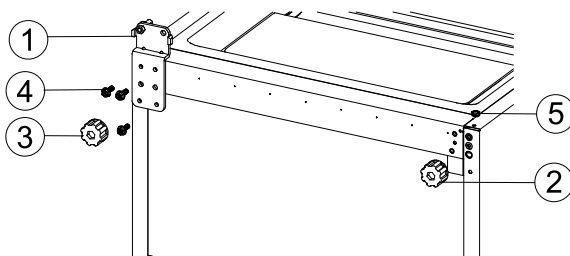


10. Move the bottom door and adjust its position to align the bottom hole with top hinge axis. Turn the middle hinge by 180°, adjust the middle hinge to the appropriate position, and then install it.

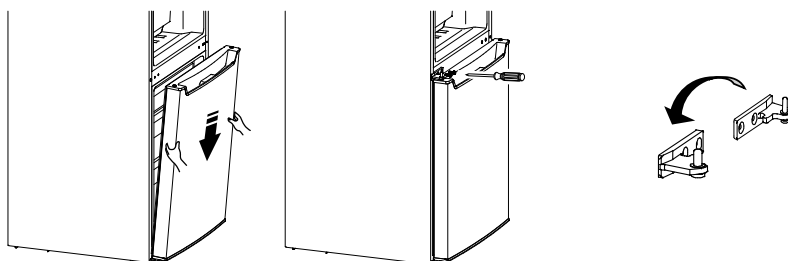


11. Undo (unscrew) the upper hinge axis, flip the upper hinge over, and replace the axis. Then place it aside as you will need it later on.

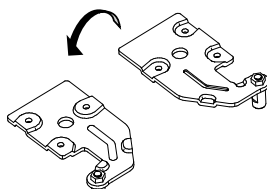

12. Remove the screw hole cover (1) and replace it on the right side (2) as shown in the figure below.

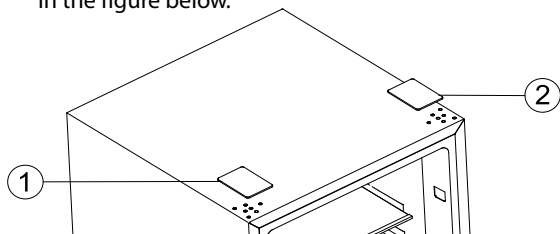

13. Move the top door to appropriate position. Adjust part (1) and top door, then fix part (1) using screws (2) (please hold the top with your hand when installing), and install part (3) (from the plastic bag) that fits the left side.

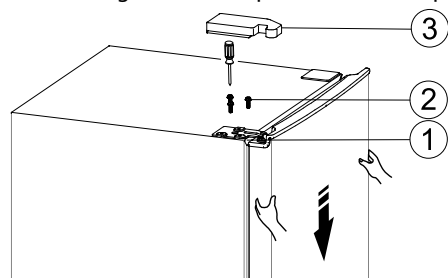

! NOTE: When installing part (3), first, push it from left to right as far as it will go, then push it down firmly.

14. Open the top door, mount the door racks, and close the door.


Removing and Installing Door Shelves

! WARNING! Do not remove or install door shelves on your own! If a door shelf is damaged, contact technical support for assistance.

To replace a door shelf, follow these steps:

Removing the Door Shelf

1. Press the right side of the shelf upward while holding the left side.
2. Once the shelf notch disengages from the door, tilt and lift it out at an angle.

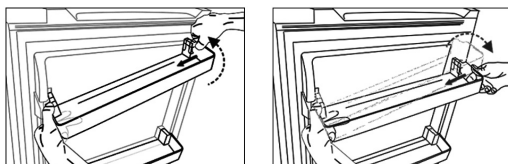

Installing the Door Shelf

1. Align the shelf hooks with the door slots at a slight upward angle. Lower the left side first, then press the right side down until it clicks into place.
2. Tilt the left side of the shelf first, ensuring the notch locks onto the door. Press the right side firmly against the door and apply downward pressure until it clicks into place.

TROUBLE SHOOTING

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not settled.

Malfunction	Possible cause and solution
Failed operation	Check whether the appliance is connected to power or whether the plug is in well contact. Check whether the voltage is too low. Check whether there is a power failure or partial circuits have tripped.
Odor	Odorous foods shall be tightly wrapped. Check whether there is any rotten food. Clean the inside of the refrigerator.
Long-time operation of the compressor	Long operation of the refrigerator is normal in summer when the ambient temperature is high It is not suggestible having too much food in the appliance at the same time. Food shall get cool before being put into the appliance. The doors are opened too frequently.
Light fails to get lit	Check whether the refrigerator is connected to power supply and whether the illuminating light is damaged Have the light replaced by a specialist.
Door seal fails to be tight	Remove foreign matters on the door seal. Heat the door seal and then cool it for restoration (or blow it with an electrical drier or use a hot towel for heating).
The Fridge/Freezer is not working	Check it is plugged in and switched on. Check that the fuse in the plug has not blown. Plug In another appliance, such as a lamp, to see if the socket is working. The Fridge/Freezer should be placed in a well ventilated room with an ambient temperature of between 16°C and 32°C. Leave the Fridge/Freezer for 30 minutes.
The Fridge/Freezer is not working	Heat dissipation of the built-in condenser via the housing, which is normal. When housing becomes hot due to high ambient temperature, storage of too much food, provide sound ventilation to facilitate heat dissipation.
Condensation appears on the outside of the Fridge/Freezer	This may be due to a change in the room temperature. Wipe off any residue of moisture. If the problem continues contact the local store where your purchase was made.
Loud noises	Whether the food is leveled, whether the refrigerator is balanced; Whether the refrigerator parts are properly placed.

- **Gurgling, whooshing:** These noises are caused by the circulation of the refrigerant liquid in the cooling system. It has become more pronounced since the introduction of CFC free gases. This is not a fault and will not affect the performance of your Fridge/Freezer.
- **Humming, purring or pulsating:** This is the compressor motor working, as it pumps the refrigerant around the system.

THIS APPLIANCE MUST BE EARTHED

This appliance is fitted with a plug which will be suitable for use in all houses fitted with sockets to current specifications.

If the fitted plug is not suitable for your socket outlets, it should be cut off and carefully disposed of. To avoid a possible shock hazard, do not insert the discarded plug into a socket.

This appliance complies with the following EEC Directives:

2014 / 35/ EU (Low Voltage Directive) 2014 / 30/ EU (EMC Directive).

ENVIRONMENT PROTECTION



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

SPECIFICATION / EQUIPMENT

Model	KF-DC190W, KF-DC190S
Total gross volume (l)	180
Total storage volume (l)	170
Storage volume refrigerator / freezer (l)	120 / 50
Defrost system	Defrost, manual
Blowing and cooling system	Defrost
Control type	Mechanical control
Energy class	A+
Energy consumption (kW*h/year)	204
Power consumption (W)	100
Voltage (V) / Frequency (Hz)	220~240 / 50
Climate class	N~ST
Compressor type / number	universal / 1
Refrigerant	R600a
Frother	Clopethane
Noise level (dB(A))	39
Super freezing	no
Door open alarm	no
Number of cooling chambers	1
Number of doors	2
Reversible door	yes
Handle	recessed
Color of the refrigerator	White, Silver
Fridge compartment	
Defrost system	Defrost, manual
Adjustable shelf type / number	2
Crisper cover type / number	glass / 1
Crisper material / number	plastic / 1
Door balcony material / number	plastic / 3
Interior lamp	yes
Cooling temperature in the fridge (°C)	from 0 to 4
Freezer compartment	
Defrost system	Defrost, manual
Freezing capacity (kg/day)	2,5
Cooling temperature in the freezer (°C)	≤-18
Freezer drawer number	3
Dimension	
Net / gross weight (kg)	38 / 41
Product dimensions (WxDxH) (mm)	495x562x1430
Packing dimensions (WxDxH) (mm)	521x585x1500
Equipment	
Refrigerator (pcs.)	1
Instruction manual (pcs.)	1
Packaging (pcs.)	1

Tear-off coupon №1 for warranty repair refrigerator KRAFT model _____ serial № _____ Withdrawn « _____ » 20 _____ y. Executant _____ signature _____ Type and content of the work performed _____ Service department's name _____ Cutting line _____	COUPON №1 for warranty repair refrigerator KRAFT model _____ serial № _____ Sold by _____ (name and address of the commercial enterprise) _____ _____ tel: _____ Date of sale « _____ » _____ y. Store stamp _____ (personal seller's signature) Service department's name and address _____ (* to be filled in by the commercial enterprise) _____ _____
Tear-off coupon №2 for warranty repair refrigerator KRAFT model _____ serial № _____ Withdrawn « _____ » 20 _____ y. Executant _____ signature _____ Type and content of the work performed _____ Service department's name _____ Cutting line _____	COUPON №2 for warranty repair refrigerator KRAFT model _____ serial № _____ Sold by _____ (name and address of the commercial enterprise) _____ _____ tel: _____ Date of sale « _____ » _____ y. Store stamp _____ (personal seller's signature) Service department's name and address* _____ (* to be filled in by the commercial enterprise) _____ _____

Refrigerator KRAFT model _____ serial № _____ Owner, his address _____ _____ signature Owner's phone _____ Reason for failure (malfunction) _____ _____ Owner: _____ signature Mechanic: _____ Full name Completed works: _____ _____ Date « _____ » _____ y. Mechanic: _____ Owner: _____ signature signature Approve _____ service company name and address _____ _____ the position of the head of the company, that performed the service Stamp signature	
Refrigerator KRAFT model _____ serial № _____ Owner, his address _____ _____ signature Owner's phone _____ Reason for failure (malfunction) _____ _____ Owner: _____ signature Mechanic: _____ Full name Completed works: _____ _____ Date « _____ » _____ y. Mechanic: _____ Owner: _____ signature signature Approve _____ service company name and address _____ _____ the position of the head of the company, that performed the service Stamp signature	

WARRANTY CARD

Date of sale

« ____ » _____ 20 ____ y.

Store stamp

When selling, the seller is obligated to fill out the warranty coupons. The date of manufacturing and serial number can be found on the packaging and on the back side of the product.

The manufacturer's warranty obligations are valid only for the KRAFT refrigerator. **The warranty period is 1 year from the date of purchase. The service life of the product conducted 5 years.**

Information about authorized service centers is available on the website <http://kraftltd.com> or by calling the support service toll-free +7(800)200-79-97. If you have any questions or problems related to KRAFT products, please contact in writing to the address: AO LEBEDINSKIY TORGOVIY DOM, No 50 V, Dnepropetrovskaya str., Rostov-on-Don, 344093, Russia, or by e-mail service@lbtd.ru.

1. The manufacturer guarantees free elimination of factory defects or technical faults during the warranty period if the Buyer complies with the terms and conditions of warranty service. All claims in appearance should be presented to the seller when purchasing the product. After purchasing the product, the consumer is responsible for all external damage.
2. The warranty applies only to products used for non-commercial personal, family or household purposes. Otherwise, the warranty period is 3 months from the date of purchase.
3. The seller reserves the right to conduct a technical examination of the product quality within the time frame established by law.
4. Warranty repairs are not performed in the following cases:
 - invalidity of the warranty card;
 - the presence of damage and malfunctions resulting from improper use of equipment in violation of the rules of operation, installation or transportation of equipment by the user or a trading organization;
 - the presence of damage and malfunctions resulting from the action of third parties or force majeure, ingress of foreign objects and insects, damage caused by animals;
 - establishment of the fact of deviation from the State technical standards, supplying electrical and cable networks, supplying more power than provided by the manufacturer;
 - establishment of the fact of repair (attempt to repair) equipment independently or by unauthorized persons;
 - using of the product for industrial or commercial purposes.
5. The warranty card is invalid in the following cases:
 - incorrect or incomplete filling of the card by the store and the master;
 - absence of the sale date and the store stamp.
6. The manufacturer is not responsible for damage caused to people, animals and premises due to violation of safety regulations, transportation and operation of the device.
7. The warranty service does not cover installation, cleaning and maintenance of the device.

The manufacturer does not accept responsibility for errors in these instructions that occurred during the printing process.

The manufacturer reserves the right to change designs, specifications, appearance, configuration of the product without impairing its consumer qualities, without prior notice to the customer.

All information presented in the instructions regarding the configuration, technical specifications, functions, color combinations, etc. is informational in nature and under no circumstances is a public offer.

Производитель не берет на себя ответственность за ошибки в данной инструкции, возникшие в процессе печати.

Производитель оставляет за собой право вносить изменения конструкций, технических характеристик, внешнего вида, комплектации товара, не ухудшающие его потребительских качеств, без предварительного уведомления потребителя.

Вся представленная в инструкции информация, касающаяся комплектации, технических характеристик, функций, цветовых сочетаний и т.д. носит информационный характер и ни при каких условиях не является публичной офертой.

Manufacturer:

Hisense Ronsheng (Yangzhou) Refrigerator Co. Ltd.

Address: No.19, Hongyang Rd., No.30, Fuyang Rd., Hanjiang District, Yangzhou, Jiangsu, China.

Importer:

SARMAT LLC.

Address: No 50 V, Dnepropetrovskaya str., apt. 2, Rostov-on-Don, PC 344093, Russia
Тел.: +7 (800) 200-79-97

Made in China

Изготовитель:

Хайсенс Роншэн (Янчжоу) Рефрижератор Ко., Лтд.

Адрес: ул. Хунъян, 19 / ул. Фуян, 30, район Ханьцзян, г. Янчжоу провинция Цзянсу, Китай.

Импортер:

ООО «САРМАТ»

Адрес: ул. Днепропетровская, 50 В, офис 2, г. Ростов-на-Дону, 344093, Россия
Тел.: +7 (800) 200-79-97

Сделано в Китае



WWW.KRAFTLTD.COM



Телефон службы поддержки клиентов

Phone customer service

+7 (800) 200 79 97

